

Användarinstruktion

BIZZYSTICK ersätter den stängda dörren

BIZZYSTICK används i kontorslandskap. Den är utvecklad som ett instrument för att visa om användaren är tillgänglig eller vill arbeta ostört. Detta för att minska antalet avbrott i arbetet och minska stress hos anställda och därigenom uppnå en ökad effektivitet och en bättre arbetsmiljö.

Förutsättningar


För att BIZZYSTICK skall fungera som ett effektivt arbetsmiljöverktyg krävs det att rutinerna för användandet är tydliga för samtliga i kontorslandskapet eftersom alla måste veta vad en aktiverad BIZZYSTICK innebär. Det är viktigt att alla respekterar dessa regler och att reglerna repeteras återkommande. Det räcker alltså inte med att bara någon eller några få i ett kontorslandskap använder BIZZYSTICK, då riskerar effekterna att utebli. Om ert företag har flera arbetsplatser med kontorslandskap bör samtliga använda samma signalsystem (BIZZYSTICK).

För att garantera bästa resultat

Köparen av denna produkt rekommenderas att genomföra en workshop eller ett informationsmöte vid första införandet av BIZZYSTICK. Syftet med denna workshop är att alla anställda ska lära sig det nya arbetssättet (även de som inte använder BIZZYSTICK). Kontakta gärna oss för att få hjälp eller råd kring detta.

Kontakt

Kontaktinformation finns på www.akilla.se. Där kan du också ladda ned denna användarinstruktion.

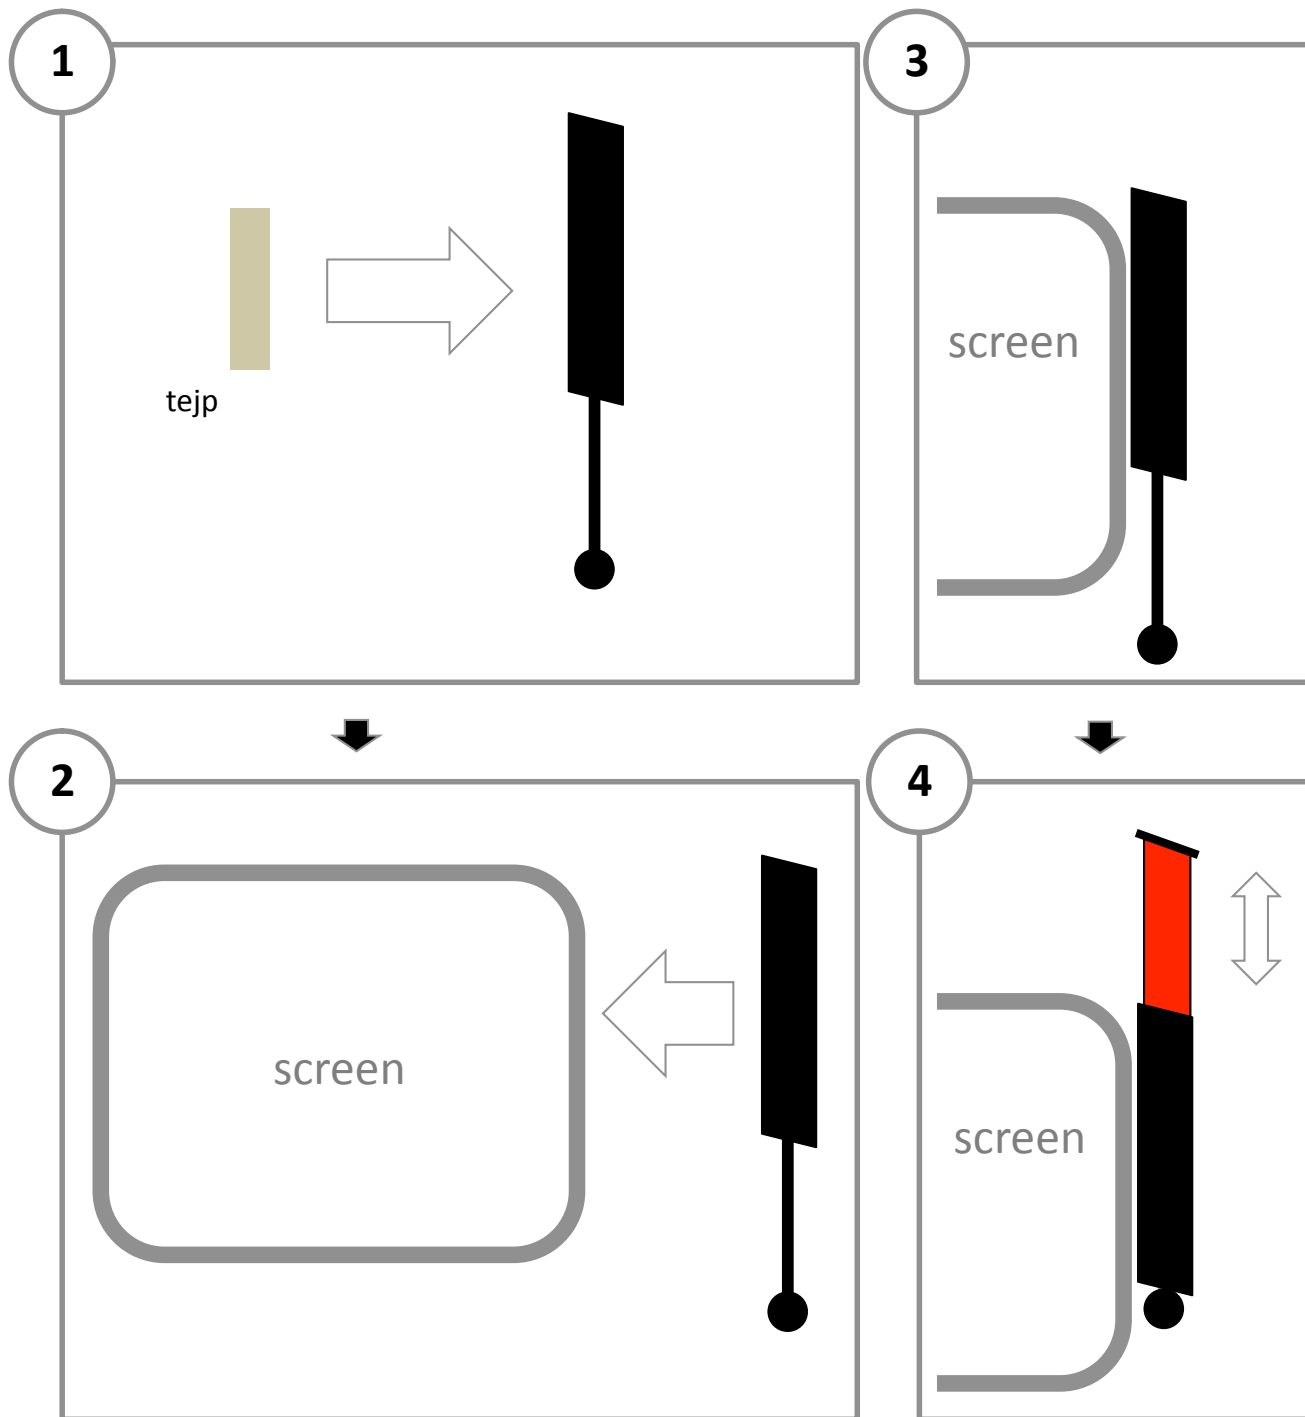

MONTERINGSANVISNING

SE

1. Ta bort skyddsplasten från den ENA sidan av den dubbelhäftande tejp.

Fäst tejp på den platta ytan på BIZZYSTICK (baksidan av den svarta delen).

2. Hitta en lämplig plats på den övre delen av sidan på din datorskärm att fästa BIZZYSTICK på. Välj samma sida som din favorithand (höger om du är högerhänt). Rengör ytan om nödvändigt.

Avlägsna den återstående skyddsplasten från den dubbelhäftande tejp som nu sitter på BIZZYSTICK. Fäst BIZZYSTICK på ytan du valt.

3. Färdigt!
4. Testa funktionen för att se att BIZZYSTICK glider smidigt när den aktiveras och deaktiveras genom att skjuta upp den och pressa ned den. Om den inte glider smidigt måste du justera monteringen, använd den medföljande extra-tejpen om så behövs.

User instructions

EN

BIZZYSTICK replaces the closed door

BIZZYSTICK is to be used in open offices. It is developed as an instrument for the user to show if he or she is available or needs to be undisturbed, a "do not disturb" sign. Used correctly this tool reduces the number of interruptions, thus also makes the user feel less stressed and makes her more effective. All in all it improves the working environment for the whole office

Conditions of use





For BIZZYSTICK to function properly it is important that there are jointly agreed rules for using it. All employees at the workplace needs to know what BIZZYSTICK means and respect it and the user have to be careful not having BIZZYSTICK activated at all times. That would dilute the value of this tool. These simple rules should be implemented when installing BIZZYSTICK and be repeated annually at least.

Optimal result

For optimal effect the buyer of this product is recommended to perform a small workshop, or information meeting, when first installing BIZZYSTICK. The purpose of this is for all employees to know and respect the tool (even those that does not use BIZZYSTICK). Please contact us if you need guidance or advice related to this.

Contact

You find contact information at www.akilla.se. You can also download this user instruction from the website.

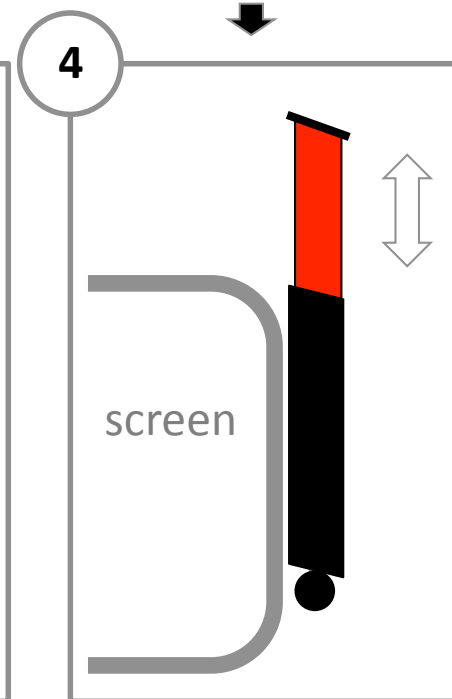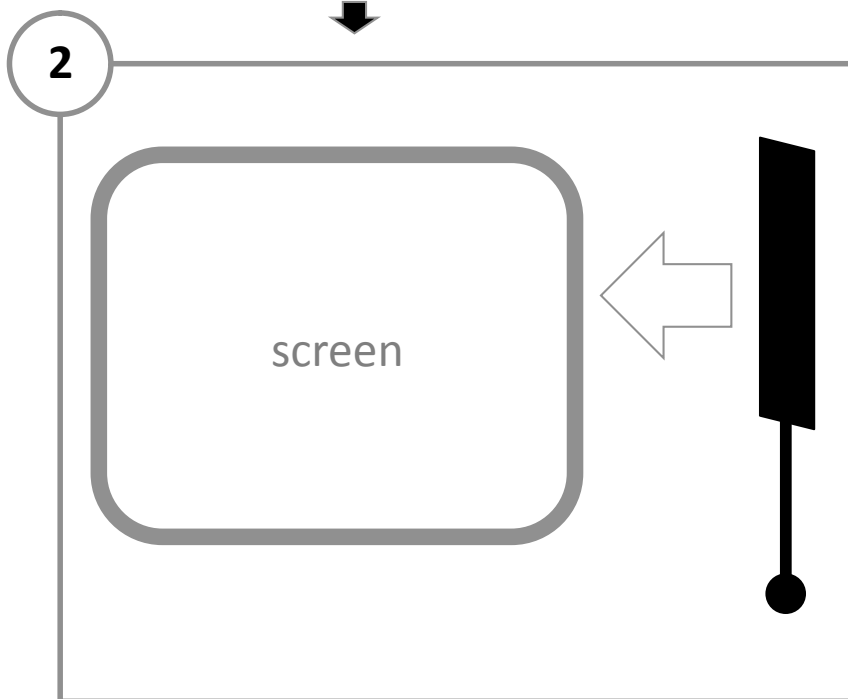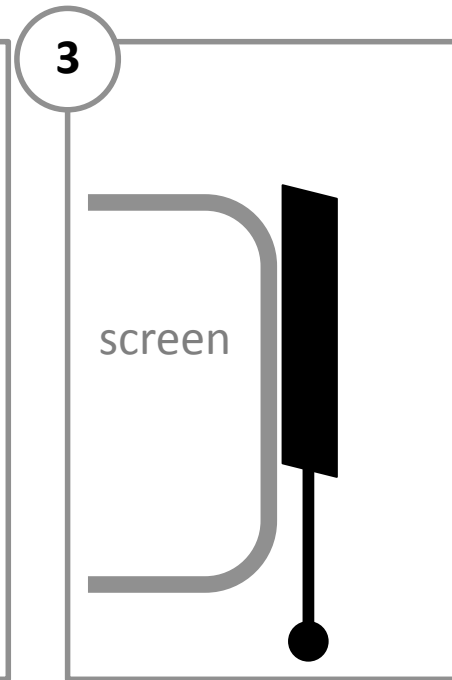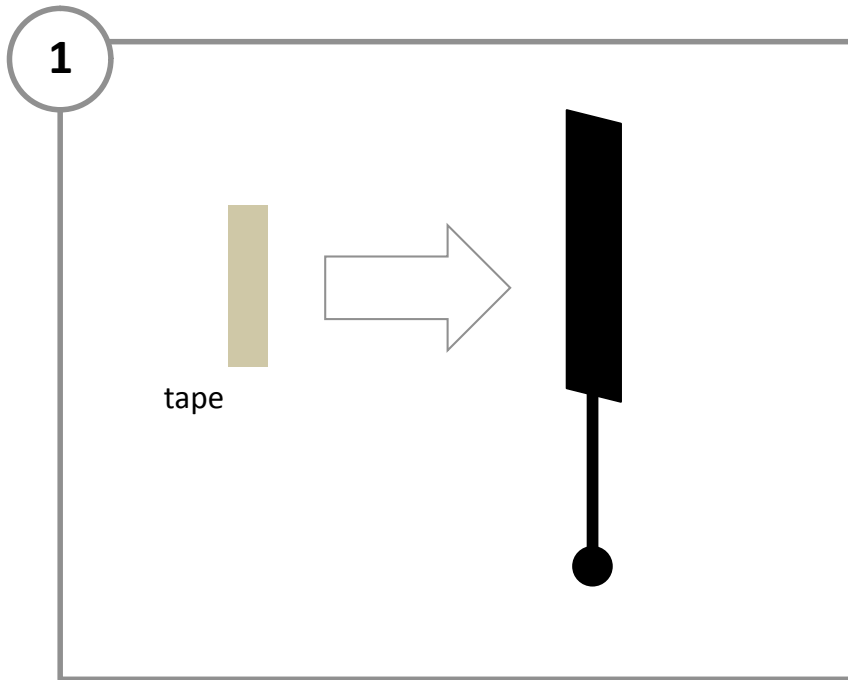

MOUNTING INSTRUCTIONS

EN

1. Remove the protective plastic from ONE side of the double attaching tape.

Attach the tape to the flat side (on the black part) of BIZZYSTICK (see marked area).

2. Find a suitable area on the upper side of your computer screen to attach BIZZYSTICK on. Use the same side as your favorite hand (right if right-handed). Clean the area if necessary.

Remove the remaining protective plastic from the double attaching tape and attach BIZZYSTICK on the chosen area.

3. Done!
4. Test to see if BIZZYSTICK is sliding smooth when activated and deactivated. If not, you need to change place. Use the extra tape if necessary.